



// FEATURES

- ❖ The transponder is used for identification in System 3060 to operate digital locking cylinders, SmartHandles, SmartRelays and SmartLocker.
- ❖ Blue, red or brown, with bonded housing or consecutive numbering. There are virtually no limits to the variety of types of transponders: a password or fire service transponder, an explosion-proof design or combined with an additional passive transponder.
- ❖ Manage an incredible 304,000 locking devices with your transponder and open doors and gates up to 400,000 times with a single battery.

// TECHNICAL DATA

- ❖ Dimensions: 42 x 13.7 mm (Ø x H)
- ❖ Typical reading range:
:: Up to 40 cm to the locking cylinder/ SmartHandle
:: up to 120 cm to the SmartRelay
- ❖ Battery:
1 x CR2032 3V lithium
Battery life: up to 400,000 activations or up to ten years on stand-by
- ❖ Temperature range: -25 °C to +65 °C

// IN SYSTEM 3060, THE TRANSPONDER IS USED FOR IDENTIFICATION AND ACTIVATION:

Digital
locking cylinders



Digitale
SmartLocker



Digital
SmartHandles



SmartRelay – Reader




SmartRelay 2
Reader



SmartRelay 3 Advanced /
SmartRelay AX Classic
LED Reader

DIGITAL LOCKING CYLINDER

 - Hold transponder at a distance of approx. 15 cm in front of the cylinder and press the transponder button.

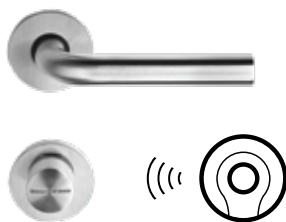

- Wait for **audible release**¹ or **optical and / or audible release** by the locking cylinder.
- Then **turn** the digital locking cylinder **thumb-turn** in the direction of opening.
- Open the door.

1) Digital locking cylinder 3061



2) Digital Cylinder AX

 


DIGITAL SMART HANDLE AX ADVANCED

- Hold the transponder in front of the door fitting and press the transponder button.



- Wait for **optical and / or audible release** by the SmartHandle.
- Then **press** the **door handle down**.
- Open the door.

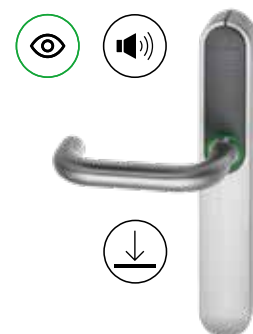

DIGITAL SMART HANDLE AX

- Hold the transponder in front of the door fitting and press the transponder button.

 


- Wait for **optical and / or audible release** by the SmartHandle.
- Then **press** the **door handle down**.
- Open the door.



DIGITAL SMART LOCKER AX

- Hold the transponder within the SmartLocker AX's read range and press the transponder button.

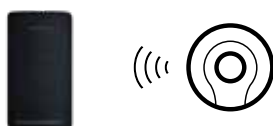

- Wait for SmartLocker to activate the **optical and / or audible release**.
- Open the locker door.



SMART RELAY – READER

- Hold the transponder within the receiving range of the SmartRelay 2, SmartRelay 3 Advanced or SmartRelay AX Classic Reader and press the transponder button.



- Wait for the SmartRelay to activate the **optical release**
- A **SmartRelay** allows an electric strike to unlock a door or can be used to open a barrier, for example.

